



For Windows-System (Win10 or newer, 64 Bit):


1. Download [Piezo Terminal V5.1](#) from website and install it.
2. Read PMC1804 technical description and datasheet of the type of piezo linear drive.
3. Connect the PMC1804 with power cable and USB cable to PC. The red light shows power on.
(Open Windows Device Manager and check if COM-port is recognized. If you have more than one COM-port, the right one is the device from "FTDI". If the COM-Port is not recognized automatically, download and install [Driver](#))

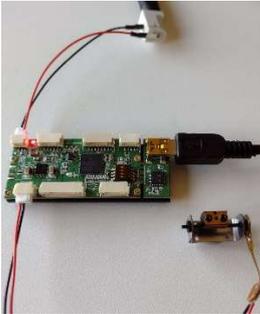

4. Start the "Piezo Terminal (V5.1+)" and choose "open loop".

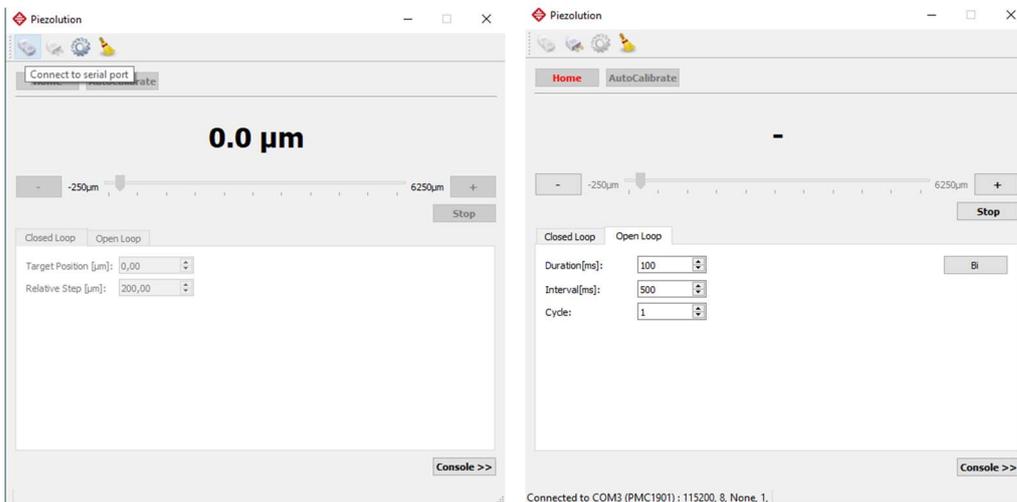

5. Open console and type in set-up: ">volt XX", ">freq XX", then click "+" and "-" to begin

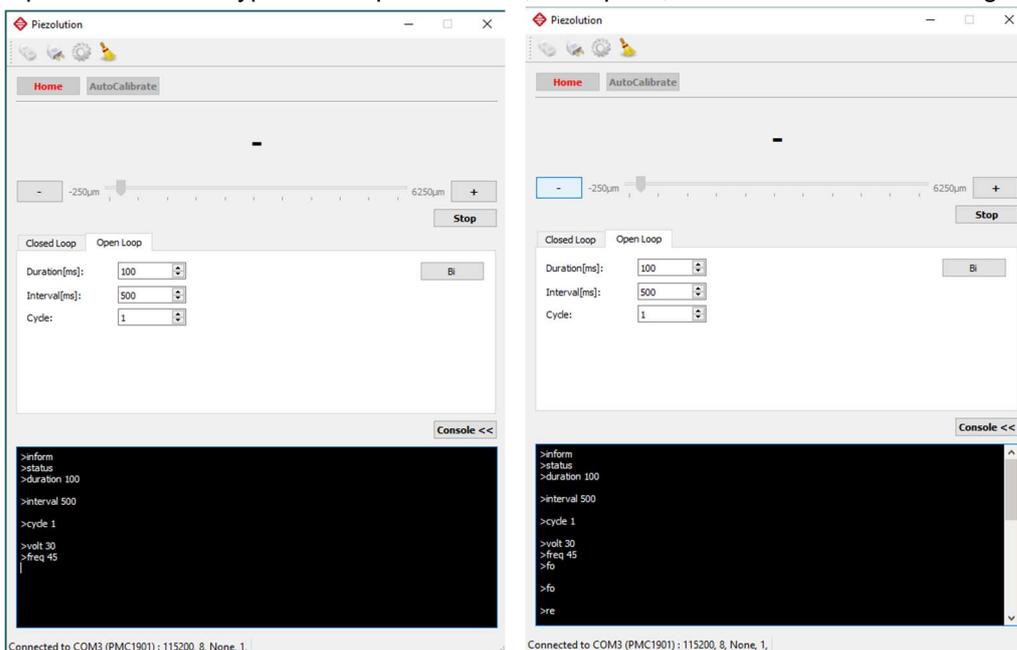

For LINUX-System or Alternative Terminals please refer to manual or contact our support.